

























* , 20% !

Kyocera FS-1041	4 / .; GDI; ; 20		100
Kyocera FS-1061DN	4 / .; GDI; Duplex; Network ; 25		203
Kyocera P2035d	4 / .; ; 30		199
ECOSYS P2135dn	4 / .; ; 35		290
ECOSYS P6021cdn	4 ; 21 / .; ;		520
Kyocera FS-4200DN	4 / .; ; 50		950
Kyocera FS-1220MFP	4 - / / / ; 20 / .;		173
Kyocera FS-1320MFP	4 - / / / ; 20 / .;		296
Kyocera FS-1325MFP	4 - / / / ; 25 / .; ;		372
ECOSYS M2035dn	4 - / / / ; 35 / .; ;		570

ECOSYS M2535dn	4 / / / ; 35 / .; ; ;		599
ECOSYS M6026cdn	4 / / / 26 / .; ;		866
ECOSYS M6526cdn	4 / / / ; 26 / .; ;		1173
ECOSYS M3040idn	4 / / / 40 / .; ; ; Touch Display; HvPAS		1645
ECOSYS M3540dn	4 / / / ; 40 / .; ;		1663
Kyocera TASKalfa 180	3 / . 4; 8 / . 3		999
Kyocera TASKalfa 1800	3 ; ; 18 / . 4; 8 / . 3;		605
Kyocera TASKalfa 1801	3 ; ; - 18 / . 4; 8 / . 3		1357
Kyocera TASKalfa 2551ci + DP-773 + CB-810	3 / .; ; ; ; ;		4465
Kyocera FS-6525MFP	3 / .; ; ; ; ;		1899
Kyocera KM-C2525E	3 / .; ; ; ;		ask

LEXMARK C530dn Colour Laser Printer	4 ; 22/21 . / . ; ;		ask
Canon I-Sensys MF 8350 Cdn	4 / / - / ; 20 / . ; ;		
OCE TDS 450	0 - , ,		
Fax System K	FAX System for FS-1118MFP		230